Quick Start Instructions

Need Set-up Help? (800) 650-3637

1 Mount Door Monitor to the Wall

A Peel off yellow backing from adhesives (3) on the back of the door monitor. The door bar should be mounted to clean, smooth surfaces.



B Adhere the door bar vertically centered to the outside of either door frame with cords facing up or down (in direction of power source). *Warning: If mounting door monitor near metal frame, mount at least 8" away from metal frame.*

 
C. Mount the Reset Button to wall using the provided double-sided tape, up to 40 feet away.




4 (Optional) Mount Magnetic Contact Switch

WHEN USING THE MAGNETIC SWITCH, THE ALARM WILL ONLY SOUND WHEN DOOR IS OPENED **AND** IF A RESIDENT IS WEARING A WRISTBAND WITHIN THE MONITORED FIELD.

A Screw magnetic contact (see below) to underside of door frame with wording facing open door. Lead cord along outside of door frame.




 B Screw magnet (see below) to door with arrow facing up.



- C Magnetic contact and magnet must align perfectly to function.
- **D** Plug magnetic contact switch to male plug attached to door alarm.


2 Plug in the AC Adapter

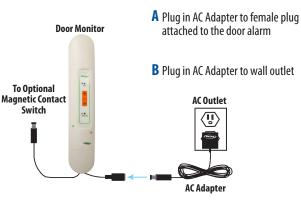

Note: Power light will illuminate to indicate system is functioning.

3 Test the System

- A Test the range of the door monitor by approaching the door with a resident transmitter from all directions, making sure that the monitor sound goes off at desired distances.
- **B** To silence the alarm, push the wall mount reset button.
- C Wait approx. 20 seconds until **Reset/Pause** light goes off before the system is ready.

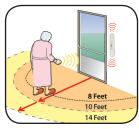

D Attach transmitter to resident's wrist with the included strap.

Warning: Door monitor will sound if door is opened and a resident wearing a transmitter is within 8-14 feet from the door monitor. If the alert is triggered when a transmitter is too close or too far away from door, or if you can pass through door, call for technical assistance.

Troubleshooting

5 Test the System with Magnetic Contact Switch

- A Test the monitor with the magnetic contact switch installed by opening the door with an activated resident transmitter in hand. Door monitor will sound when door is opened.
- **B** To silence the alarm, push the wall mount reset button.
- **C** Wait approximately 20 seconds until **Reset/Pause** light goes off before the system is ready.

D Attach transmitter to resident's wrist with the included strap.

Warning: Door monitor will sound if door is opened and a resident wearing a transmitter is within 8-14 feet from the door monitor. If the alert is triggered when a transmitter is too close or too far away from door, or if you can pass through door, call for technical assistance.

Call Smart Caregiver for assistance at (800) 650-3637