

# **Supine Stander features**







Supported by the hand Anchor, this child is able to participate in activities she enjoys.




This client has advanced so far that the headrest can now be flipped back out of the way.



The Supine Stander stays secure at any angle. Turn the crank to gradually increase weight-bearing.

## **Easy transfers for large clients**

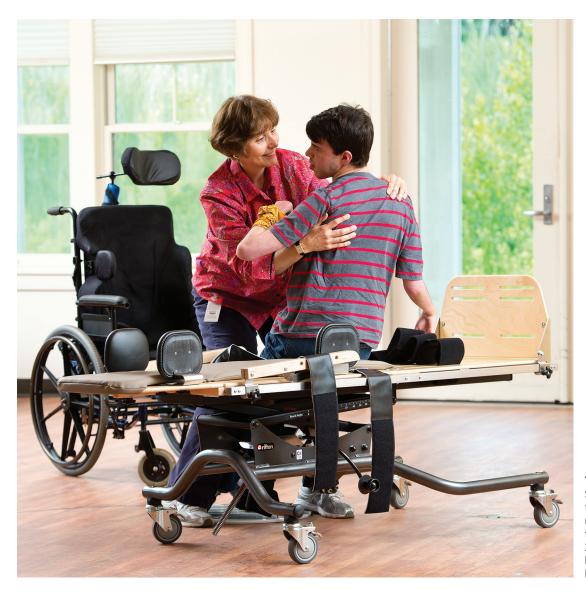

The large Supine Stander makes transfers easy. The manual crank raises the stander from 21" (wheelchair height) to 30" in the horizontal position.



Use the frame's marked calibrations to record and maintain each client's optimal position.



Once upright, the client is on the same level with caregivers and peers and can interact with her environment.



### **Components**



#### Tray

The tray has a smooth, cleanable surface with rounded corners. Adjust the armrests to change the angle of the tray.

Inside dimensions: 26"x15"





#### **Additional laterals**

Add a pair of additional laterals for extra support. Laterals adjust easily even with the client in the stander.





#### **Sandals and wedges**

Sandals and wedges raise heels or toes. Configure them with the unique "stack and latch" feature. For asymmetrical leg lengths, combine two wedges under one sandal.

Small: 3"x7", med: 4"x9", large: 5"x101/2"





#### Adjustable abduction wedge

The adjustable abduction wedge can be changed from 3½" to 11" in width depending on how much abduction is desired.





#### **Round abductor**

The round abductor helps maintain 4" of comfortable knee separation.



### Components (continued)



Collar

The collar adds 2" of separation to the round abductor.

(Requires round abductor)





#### **Hand Anchor**

The hand Anchor attaches to the tray with a powerful suction cup. With a secure anchor point for one arm, the user can perform tasks more easily with the other arm and hand.







## 2021 order form

Use dimension chart to select appropriate size.

User dir	nensions (inches)	E420 small	E430 large		
Height		30-50	46-72		
	<b>Key user dimension: height</b> Select the appropriate stander by the user's overall height. Choose the model that allows for growth.				
N	Important: User's weight must not exceed the maximum working load.				

Item dimensions (inches)	E420 small	E430 large
Board length and width	53 x 16½	73 x 19
Distance between laterals	7-13	9-16
Height when horizontal	281/2	21-30
Height when vertical	541/2	74
Base length and width	37½ x 27	46½ x 29½
Max. working load (lb)	100	250



				E420 small	E430 large
		* <b>Supine Stander</b> includes padding, footboard, adjustable armrests, hip strap, chest strap, leg straps, one pair of laterals, one pair of head blocks and double-locking casters.		E40	E41
Additional laterals (pair)		Small	E504	N/A	
		CHOOSE	Large	N/A	E439 🔲
Tray			E404	E414 🔲	
Adjustable abduction wedge				E945	E945
Round abductor				E933	E933 🗆
Collar				E934 □	E934
Sandals (pair) Small			Small	E422	N/A
		Medium	E433	E433	
			Large	N/A	E432 🔲
Wedges (pair, requires sandals)		Small	E424	N/A	
		CHOOSE	Medium	E435	E435
			Large	N/A	E434 🔲
Hand Anchor (For more hand/arm support options see pp. 104–107.)			K821	K821	
Total			E420	E430	

<sup>\*</sup> Required