



Convaid Trekker

Our newest generation of Trekker wheelchair: Lightweight, compact-folding tilt-in-space wheelchair.









*Positioning options & accessories sold separately

5

www.Convaid-R82.com Seating | Trekker





Trekker Accessories






















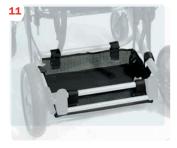











- **Extended Headrest Canopy** With or Without Windows
- **Headrest Cover (Canopy)**
- **Mosquito Net** (Canopy Required)

IV Pole

Rain Cover (Canopy Required)

- **Clear Upper Extremity Support Tray**
- **Padded Tray Cover** (Clear Tray Required)
- Oxygen Tank Holder


LTV Ventilator Holder

- **Ventilator/Suction** Machine Hard Tray
- **Medical Necessity Basket**
- **Under Seat Storage Basket**

- **Caster Locks**
- **Curb Tipper**
- **Rear Anti-tip Tubes**





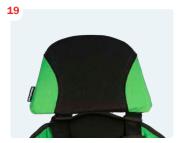



































- **Anatomic Headrest by R82**
- Adjustable Wing Head Support 18

Cross Vest by R82

Height Adjustable Curved Head Support

- **Chest Belt by R82**
- Height Adj. Lateral Thorasic Support Swing-Away Laterals

Neoprene Vest by R82

H-Harness with **Padded Covers**

(Pommel)

Utility Bag

- Width, Height, Adj. Lateral **Thorasic Support -Fixed Laterals**
- Width Adjustable Lateral **Pelvic Support With or** Without Armrest **Planar Seat Cushion**

- **Contoured Back Cushion**
- **Contoured Seat Cushion** • 1" Open Cell Foam Insert (option) • 1/2" Soft Viscoelastic Foam Insert (option)
 - 1" Open Cell Foam Insert (option)
 - 1/2" Soft Viscoelastic Foam Insert (option)

- Angle Adjustable Elevating Leg Rest with one piece footplate
- Individual Angle Adjustable. Footplates (ELR Required)
- **Shoe Holders With Padded** Straps (Therafin) Footpositioners (not shown)
- **Footbox** Calf Panel (not shown)

Medial Knee Abductor

A. **2-Point Positioning Belt**

B. 3-Point Positioning Belt C. 4-Point Positioning Belt

www.Convaid-R82.com Seating | Trekker



Convaid Trekker Seat

Specifications

Seat Size	1 (12")	2 (14")
Seat width	11.75"	13.75"
Seat depth range	7.5" - 11.5"	9.5" - 16.5"
Back height	13" - 17"	17" - 26"
Hip width between hip guides	6.5"-11.5"	6"-14"
Trunk width between fixed laterals	8.5"-12"	10.5"-14"
Trunk width between swing-away laterals	6.5"-12"	8.5"-14"
Seat to Footplate (one-piece footplate)	4" - 12 3" - 11"*	4" - 12" 3" - 11"*
Seat to Footplate (individual footplates)^	4.75" - 10.5" 1" - 5"*	7" - 13" 1" - 6.25"*
Back angle adjustment	80° - 110°	80° - 110°
Optional recline adjustment	80° - 170°	80° - 170°
Tilt adjustment	-5° to 45°	-5° to 45°
Headrest extension	8"	8"
Shoulder strap height	14.5" - 20.5"	15" - 23"
Footplate adjustment angle	±15°	±15°
Weight of seating system [△]	10 lbs	11.5 lbs

Convaid Trekker Frame

Specifications

Frame Size	1 (14")
Folded length	39"
Folded width	26"
Folded height	13.5"
Push handle adjustments	29" - 43"
Weight of frame	25 lbs
Overall height	37.5"
Overall length	42.5"
Overall width	26"
Weight capacity regular/ transit	110/110 lbs

www.Convaid-R82.com Seating | Trekker

^{*}Reduced height when footplates are flipped $^\Delta \text{Weight}$ of chair is without front rigging